
1. SWITCHES ARE REQUIRED TO TURN CORRESPONDING LOADS ON. LOADS TURN OFF WHEN SENSOR TIMES OUT OR WITH THE SWITCH. MANUAL MODE OPERATION:

AUTOMATIC MODE OPERATION:

1. WHEN SENSOR ACTIVATES, BOTH LOADS TURN ON.

NOTES

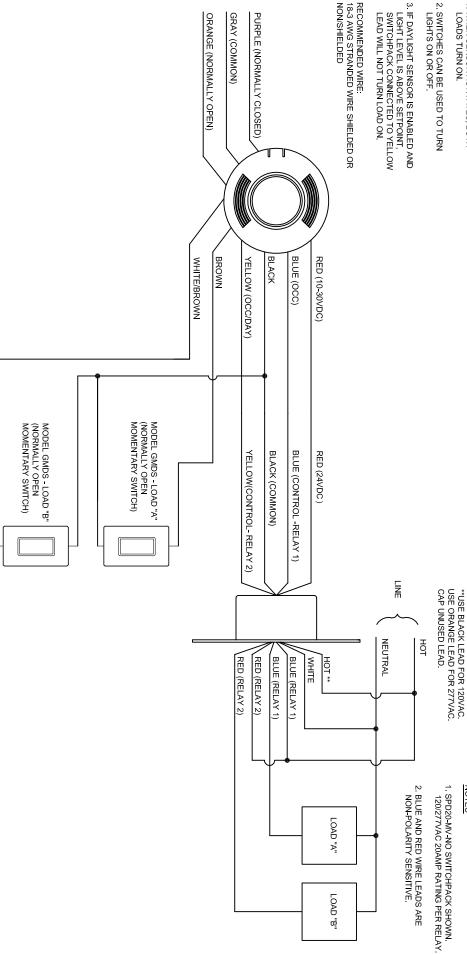



- NOTES:
 1. SENSOR TYPE INCLUDE OAC-P-0500-R, OAC-P-1500-R, OAC-U-0501-R, OAC-U-1000-R, OAC-U-2000-R, OAC-DT-0501-R, OAC-DT-1000-R, OAC-DT-2000-R.
 2. SPD20-MV-NO SWITCHPACK SHOWN. REFER TO CUT SHEETS AND/OR INSTALLATION INSTRUCTIONS FOR OTHER GREENGATE SWITCHPACK WIRING.



2	Peac	Add	Fax:	Tel:
rolsSales@	htree City,	Addr: 203 Cooper Circle	Fax:1-800-954-7016	Tel:1-800-333-38/9
ControlsSales@cooperindustries.com	Peachtree City, GA 30269. USA	per Circle	7016	38/9
ıstries.con	USA			

PROJECT		DRAWN BY	CHECKED BY	DRAWN BY CHECKED BY APPROVED BY
	CEILING SENSOR WIRING DIAGRAM		CHKBY	APPBY
IIIE SIN	SINGLE SENSOR BI-LEVEL MANUAL/AUTO ON AND 05-29-2013	DATE 05-29-2013		
	MANCAL/ACTO OFF CONTACE	DWG NO.		REV.

C2-1D1-1-2LV0-000