


- AUTOMATIC MODE OPERATION:
1. WHEN SENSOR ACTIVATES LOAD TURNS ON.
  2. LOAD TURNS OFF WHEN SENSOR TURNS OUT.

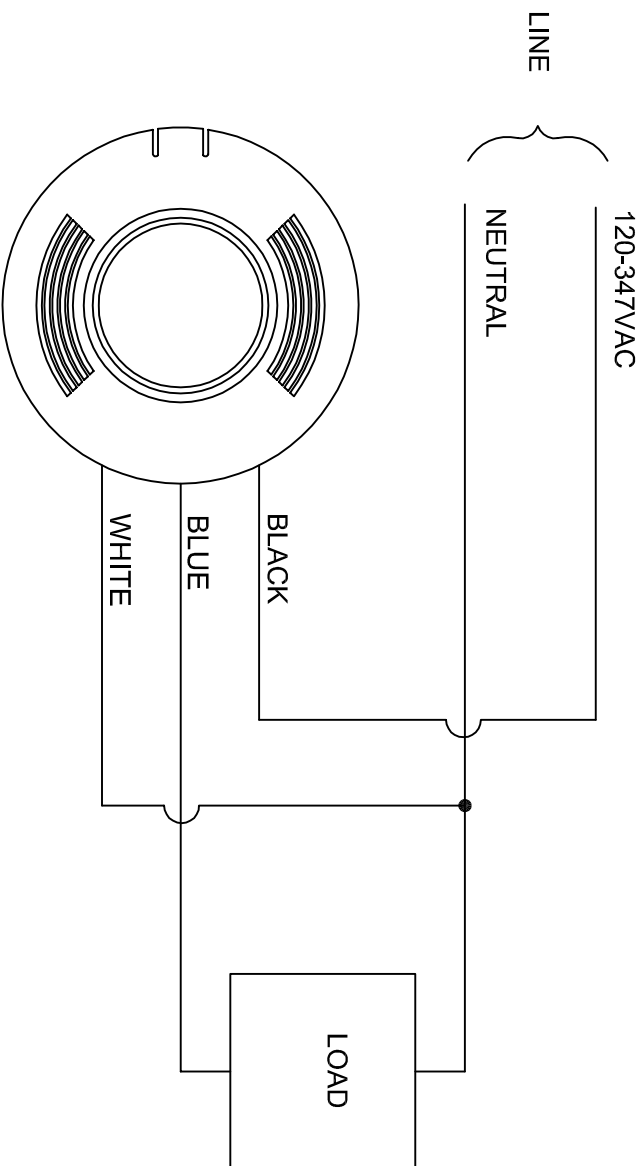

NOTES:  
 1. SENSOR TYPE INCLUDE OAC-P-0500-MV, OAC-P-1500-MV, OAC-U-2000-MV, OAC-DT-2000-MV.



Tel: 1-800-553-3879  
 Fax: 1-800-954-7016  
 Addr: 203 Cooper Circle  
 Peachtree City, GA 30269, USA  
 ControlsSales@cooperindustries.com  
 www.coopercontrol.com

PROJECT: CEILING SENSOR WIRING DIAGRAM

TITLE: LINE VOLTAGE SINGLE SENSOR AUTO ON /OFF

DATE	DRAWN BY	CHECKED BY	APPROVED BY
05-29-2013			
DWG NO.	REV.		
C3-100-1-0000-000	A		