


MANUAL MODE OPERATION:

1. SWITCH IS REQUIRED TO TURN LOAD ON.
2. LOAD TURN OFF WHEN SENSOR TIMES OUT OR WITH SWITCH.

AUTOMATIC MODE OPERATION:

1. WHEN SENSOR ACTIVATES LOAD TURNS ON.
2. SWITCH CAN BE USED TO TURN LOAD ON OR OFF.

RECOMMENDED WIRE:
18-3 AWG STRANDED WIRE SHIELDED OR NON-SHIELDED

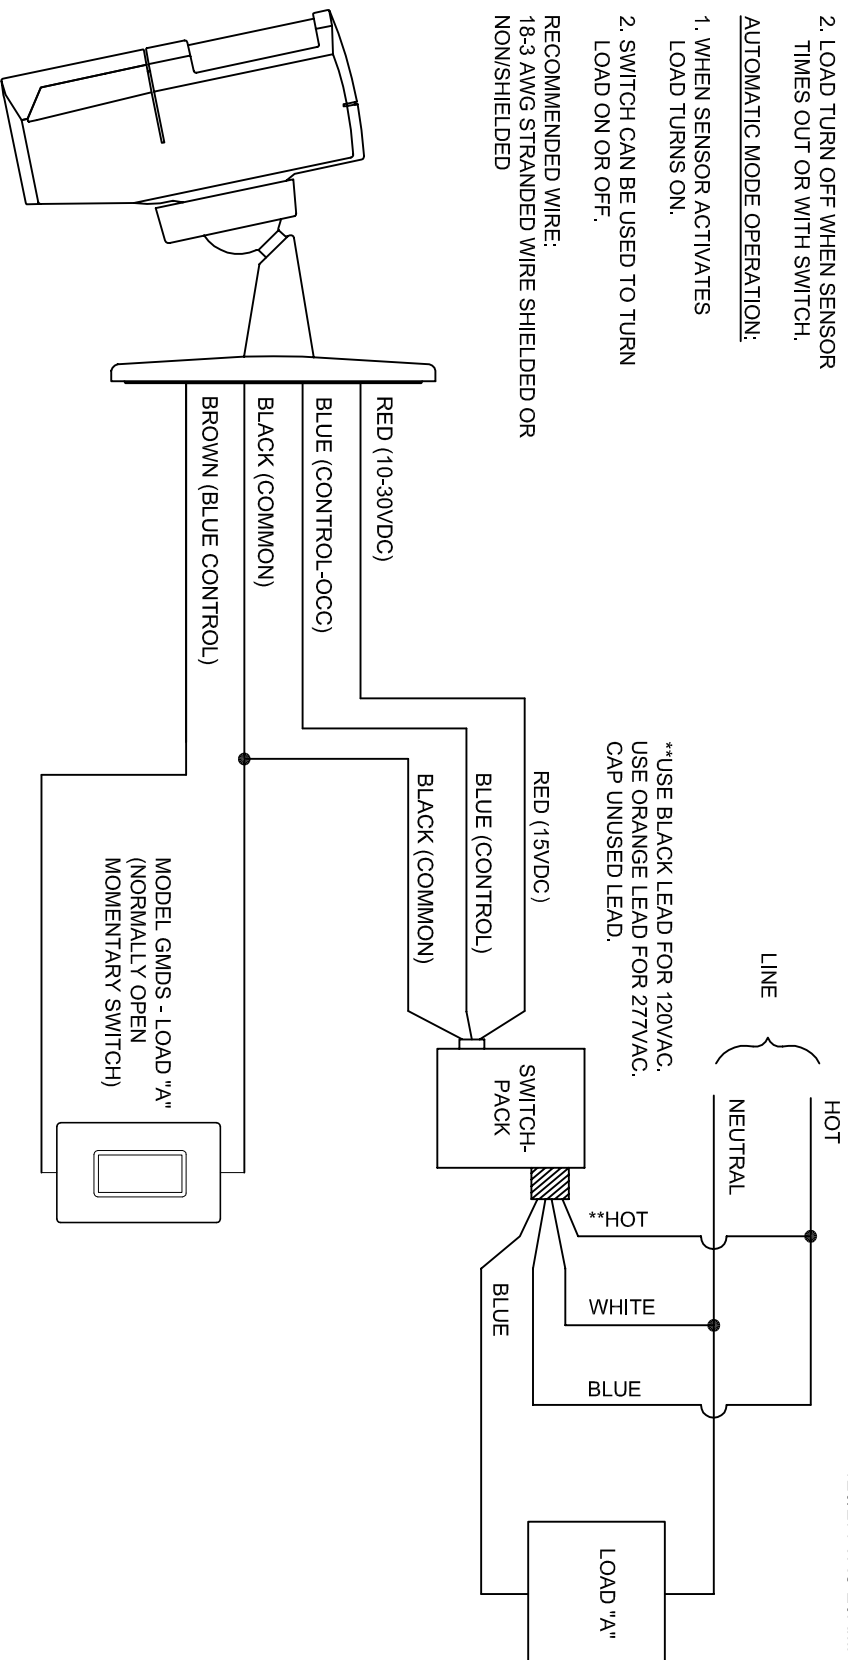

**USE BLACK LEAD FOR 120VAC.
USE ORANGE LEAD FOR 277VAC.
CAP UNUSED LEAD.

NOTES

1. SP20-MV SWITCHPACK SHOWN, 120/277VAC 20AMP RATING.

NOTES:
1. SENSOR TYPE INCLUDE OAWC-P-120W, OAWC-P-009L-H
2. SP20-MV SWITCHPACK SHOWN. REFER TO CUT SHEETS AND/OR INSTALLATION INSTRUCTIONS FOR OTHER GREENGATE SWITCHPACK WIRING.



PROJECT WALL/CORNER SENSOR WIRING DIAGRAM

TITLE SINGLE SENSOR AUTOMANUAL ON/OFF CONTROL

Tel: 1-800-553-3879
Fax: 1-800-954-7016
Addr: 203 Cooper Circle
Peachtree City, GA 30269, USA
ControlsSales@cooperindustries.com
www.coopercontrol.com

DESIGN BY CHECKED BY APPROVED BY

DATE 05-29-2013

DWG NO. W3-1S1-1-1LV0-000 REV. A