INSTALLATION INSTRUCTIONS

VFS-BD OR VFM-BD BARN DOOR VISION FLOOD Sheet 1 of 1

6/01/09

IMI-569

NOTE: DO NOT USE FINIAL TO LIFT FIXTURE OR LENS ASSEMBLY.

IMPORTANT: Read carefully before installing fixture. Retain for future reference.


General: Upon receipt of the fixture, thoroughly inspect for any freight damage, which should be brought to the attention of the delivery carrier. Compare the catalog description listed on the packing slip with the fixture label on the housing to assure you have received the correct merchandise.


Safety: This fixture must be wired in accordance with the national electrical code and applicable local codes and ordinances. Proper grounding is required to insure personal safety. All work should be done by a qualified electrician.

WARNING: Make certain power is <u>OFF</u> before starting installation or attempting any maintenance.

ACCESSORY INSTALLATION

- 1. Make sure all power is off.
- Screw the provided set screws partially into the threaded holes in the top and sides of the fixture door.
- Place a barn door assembly into the door groove (long assemblies for the top and bottom, short assemblies for the sides).
- 4. Position the assembly so that the dimple in the base of the assembly aligns with the set screw. Securely tighten the set screw.
- **5.** Repeat steps 3 and 4 for each barn door you wish to install.
- 6. To position each door, hold the door and slightly loosen the screws on both ends of the door assembly and rotate the door to it's desired position and securely retighten the screws on both ends.

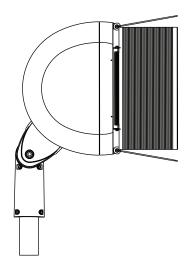

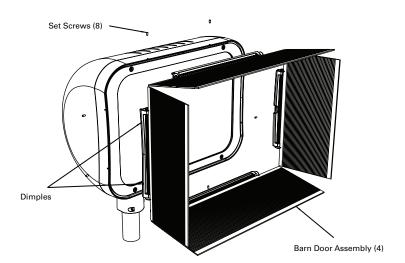

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.

