
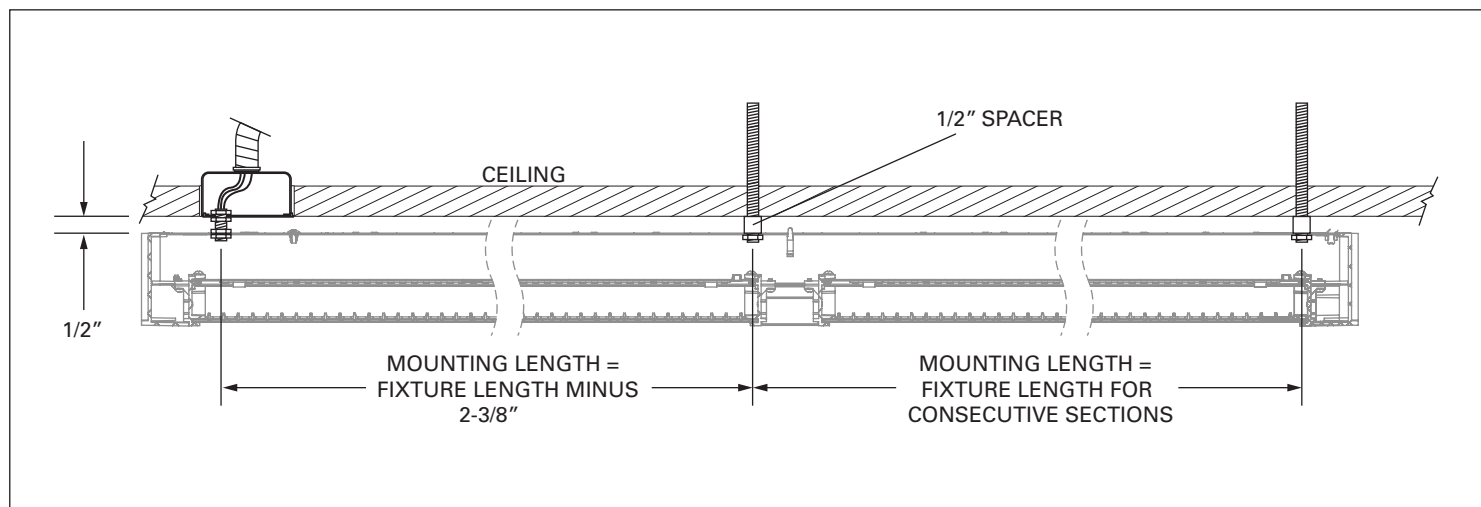


SAVE THESE INSTRUCTIONS

Corelite luminaires are precision tooled for simple trouble free contractor installation. Custom crossbar cover supports the fixture at the power mount and connects to a 4" octagonal J-Box. All other mounts interface to a 1/4-20 stud protruding from the ceiling. The first suspension point is the length of the fixture less 2-3/8", all other suspension points are 4', 8' or 12' on center.

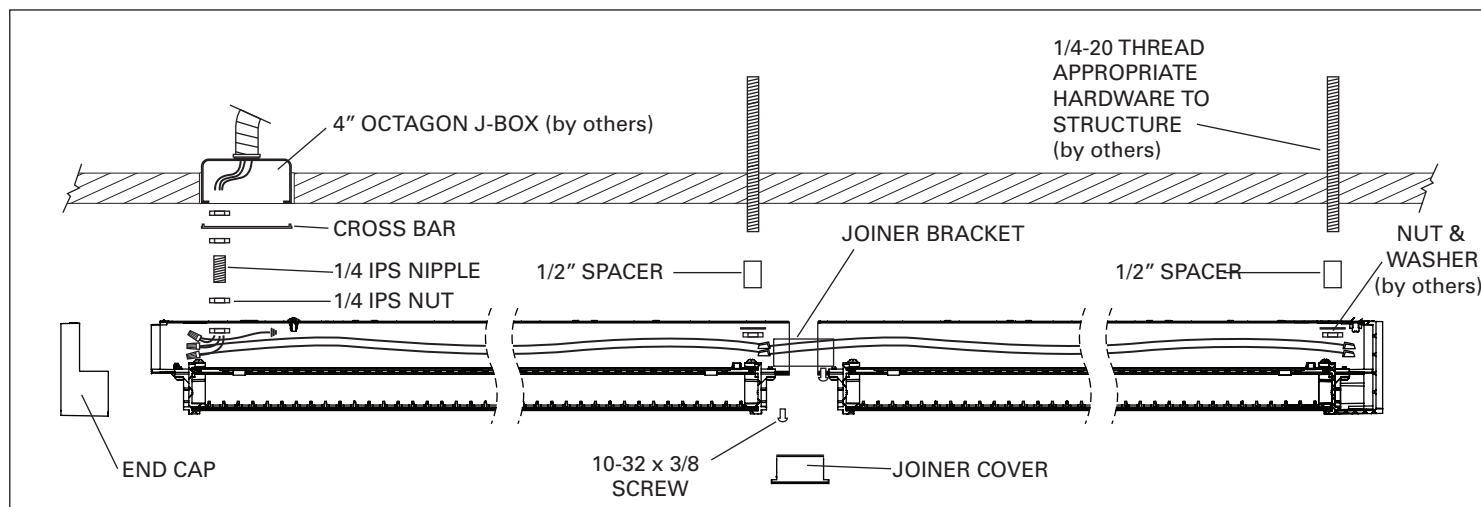

FIXTURE INSTALLATION SEQUENCE

1. Layout mounting locations. (Leave poly bag on fixture)
2. Ensure that power feed is at the UL end of the fixture.
Power feed: to be installed to local and national electrical codes by a Certified Electrician.
3. Install 1/4 IPS nipple and locknuts to crossbar cover.
4. Feed power wires through nipple.
5. Install Crossbar Cover to J-Box.
6. Remove knock-outs at mount locations of fixture.
7. Thread 1/2" long spacer on 1/4-20 threaded rod.
8. Raise fixture and locate over 1/4 IPS nipple.
9. Fasten fixture using 1/4 IPS locknuts at power end to 1/2" distance from ceiling as shown, and nut/washer (by others) at other end.
10. Connect wires ensuring all connections are properly matched.
11. For continuous mounts, repeat STEP 7.
12. Attach joiner bracket to next light fixture with 10-32 x 3/8" screws. Raise fixture and slide opposite end of joiner bracket into existing fixture and attach with 10-32 x 3/8" screws.
13. After all fixtures are installed, attach end caps and joiner covers (if necessary).

¹Not all options available. Please consult your Cooper Lighting Solutions Representative for availability. Specifications and Dimensions subject to change without notice.