



Lumière  
1250 Calle Suerte  
Camarillo, CA 93012  
Telephone: (805) 484-7713 FAX: (805) 445-7893



## INSTALLATION INSTRUCTIONS: CAMBRIA 205, 206, 215

### WARNING!

WIRING AND INSTALLATION MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN ONLY. TURN POWER OFF BEFORE INITIAL INSTALLATION, SERVICING, MAINTENANCE, OR RELAMPING.

FIXTURES SHOULD ALWAYS BE INSTALLED IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRIC CODES. THIS IS A 12V FIXTURE. A REMOTE TRANSFORMER IS REQUIRED. FOR USE WITH MAXIMUM 25A, 15V POWER UNITS ONLY.

USE UL LISTED WATERPROOF WIRE CONNECTORS: CAT NUMBER KING-T6, MANUFACTURED BY KING TECHNOLOGY, INC. OR EQUIVALENT.

### NOTE.

DO NOT INSTALL THIS FIXTURE IN ANY COMBUSTIBLE MATERIALS.

### INSTALLATION INSTRUCTIONS:

#### MOUNTING TO JUNCTION BOX:

1. PUSH FIXTURE WIRES THROUGH THE THREADED HOLE OF THE JUNCTION BOX COVER AND SCREW STEM IN. USE LOCK NUT TO FIRMLY HOLD THE FIXTURE.
2. CONNECT FIXTURE WIRES TO THE TRANSFORMER WIRES (POLARITY NOT CRITICAL).
3. ATTACH THE FIXTURE AND COVER WITH COVER GASKET SECURELY TO THE JUNCTION BOX.

#### MOUNTING TO GROUND SPIKE:

1. PUSH FIXTURE WIRES THROUGH THE HOLE IN THE SPIKE AND THREAD THE FIXTURE STEM ONTO THE SPIKE.
2. CONNECT FIXTURE WIRES TO THE TRANSFORMER WIRES (POLARITY NOT CRITICAL).
3. PLUNGE THE SPIKE INTO THE GROUND AT THE DESIRED LANDSCAPE LOCATION.

LUMIERE GROUND SPIKES AND OTHER ACCESSORIES NEED TO BE ORDERED SEPARATELY.

#### TO ADJUST FIXTURE AIMING:

LOOSEN SCREW (B) WITH ALLEN WRENCH PROVIDED, AIM FIXTURE. TIGHTEN THE SCREW.

#### USE ONLY:

FOR 205: 12 V, MR11, 35 WATT MAX BI-PIN HALOGEN LAMP.

FOR 215: 12 V, MR11, 35 WATT MAX D.C. BAYONET BASE HALOGEN LAMP.

FOR 206 (SHOWN): 12 V, MR16, 50 WATT MAX BI-PIN HALOGEN LAMP.

CHECK PACKAGE AND FIXTURE LABELING FOR PROPER LAMP TYPE AND WATTAGE.

#### TO RELAMP:


##### FOR MR11 AND MR16 BI-PIN LAMPS:

UNCREW THE HOOD, PULL LAMP OUT. PUSH NEW LAMP IN. SCREW THE HOOD BACK ON. MAKE SURE THAT HOOD SITS SNUGLY ON O-RING FOR A WATERTIGHT SEAL.

##### FOR MR11 AND MR16 D.C. BAYONET BASE LAMPS:

UNCREW THE HOOD. PUSH LAMP INTO SOCKET AND TURN LAMP COUNTERCLOCKWISE; PULL LAMP OUT OF SOCKET. REPLACE LAMP BY PUSHING NEW LAMP INTO SOCKET BY ALIGNING PINS ON SIDE OF LAMP BASE WITH THE SLOTS IN THE SIDES OF THE SOCKET. PUSH LAMP INTO SOCKET AND ROTATE CLOCKWISE. SCREW THE HOOD BACK ON. MAKE SURE THAT HOOD SEATS SNUGLY ON O-RING FOR A WATERTIGHT SEAL.

### CAMBRIA 206 SHOWN

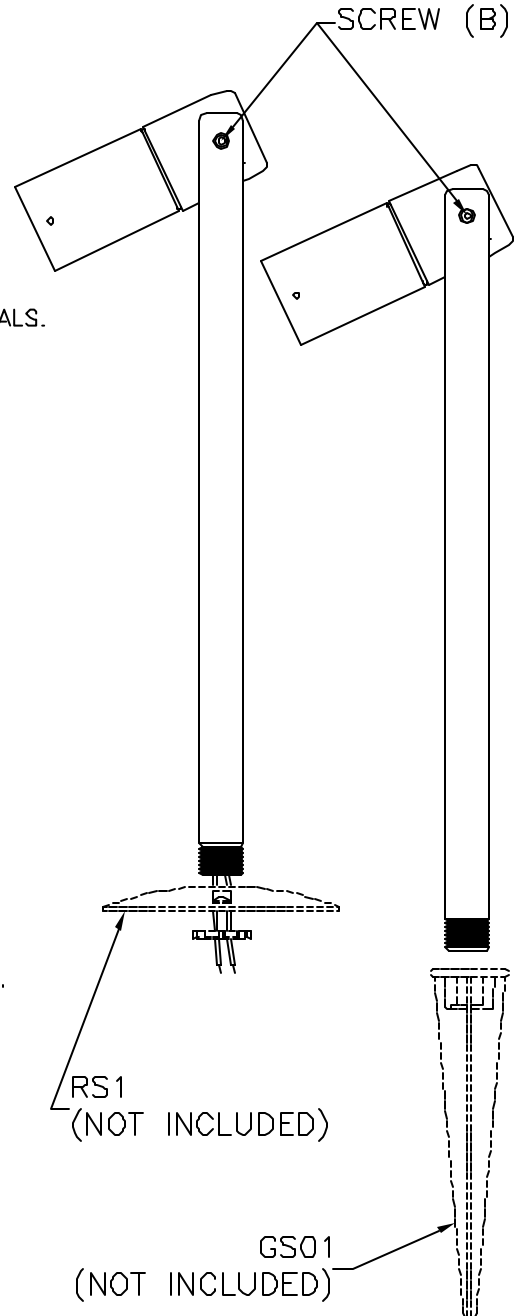

Cooper Lighting Solutions - Lumière reserves the right to make design changes without notice.

 Lumière 1250 Calle Suerte Camarillo, CA 93012 Telephone: (805) 484-7713 FAX: (805) 445-7893		 COOPER Lighting Solutions	
DWG No.	2671	REV.	B
SHEET 1 OF 1			