
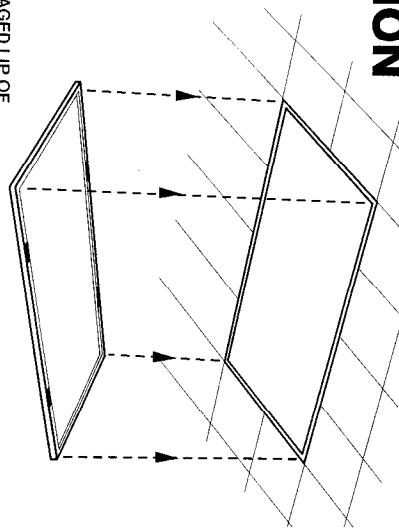


# "TK" TRIM KIT ASSEMBLY & INSTALLATION

## ASSEMBLY OF THE "TK" TRIM

- A. ORIENT THE RETAINING BRACKETS SO THE RAISED LIP OF THE RETAINING BRACKET IS TO THE OUTSIDE OF THE SIDE TRIM. (THE OUTSIDE OF THE SIDE TRIM IS THE LONGEST SIDE OF THE TRIM). NOW SLIDE THE BRACKETS INTO THE GROOVE ON THE SIDE TRIM (TWO PER SIDE TRIM). INSTALL A 90° ANGLED COUPLER INTO THE GROOVE OF EACH END OF EACH SIDE TRIM. SECURE EACH COUPLER TO THE SIDE TRIM WITH A #6 X 1/4 INCH LONG PAN HEAD PHILLIPS LOCKING SCREW.
- B. SLIDE THE END TRIM ONTO THE ANGLED COUPLER AT ONE END OF THE SIDE TRIM TO FORM A 90° CORNER WITH THE SIDE TRIM. SECURE THE END TRIM TO THE COUPLER WITH AN #6 X 1/4 INCH PHILLIPS HEAD LOCKING SCREW. INSTALL THE REMAINING END TRIM ON THE OPPOSITE END OF THIS SIDE TRIM IN THE SAME MANNER AS ABOVE.
- C. INSTALL THE REMAINING SIDE TRIM BY SLIDING THE COUPLERS THAT ARE ATTACHED TO THE ENDS OF THE SIDE TRIM INTO THE GROOVES IN THE END TRIMS AND SECURE WITH THE #6 X 1/4 INCH LONG PHILLIPS HEAD LOCKING SCREWS.

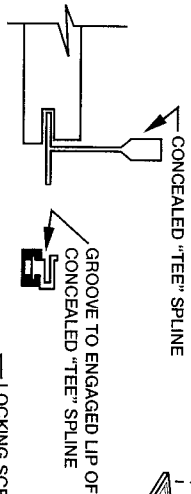

## THE "TK" TRIM IS INSTALLED AFTER THE LUMINAIRE IS INSTALLED IN THE CEILING SYSTEM

1. TO INSTALL THE "TK" TRIM, THE RETAINING BRACKETS ON EACH SIDE OF THE TRIM SHOULD BE LOCATED AT THE CENTER OF THE TRIM.
2. ALIGN THE GROOVES IN THE RETAINING BRACKETS WITH THE LIP OF THE CONCEALED "TEE" SPLINE ON ONE SIDE OF THE LUMINAIRE BODY; THEN SLIDE THE BRACKET ONTO THE LIP OF THE CONCEALED "TEE" SPLINE.
3. DEFLECT THE OPPOSITE SIDE OF THE TRIM UNTIL THE RETAINING BRACKETS ON THAT SIDE WILL PASS THE LIP OF THE CONCEALED "TEE" SPLINE. RAISE THAT SIDE UNTIL THE GROOVES IN THE RETAINING BRACKETS ALIGN WITH THE LIP OF THE CONCEALED "TEE" SPLINE. WHEN THE GROOVE AND LIP ARE ALIGNED, RELAX THE TENSION ON THE TRIM, WHICH WILL ALLOW THE RETAINING BRACKETS TO ENGAGE WITH THE "TEE".

