

INVUE™ INSTALLATION INSTRUCTIONS

IMPORTANT: Read carefully before installing fixture. Retain for future reference.

**WALL MOUNT ARM
(WMA)
Sheet 1 of 1
2/27/04 IMI-469**

General: Upon receipt of accessory thoroughly inspect for any freight damage, which should be brought to the attention of the delivery carrier. Compare the catalog description listed on the packing slip with the label on the housing to assure you have received the correct merchandise.

Safety: This accessory must be wired in accordance with the national electrical code and applicable local codes and ordinance. Proper grounding is required to insure personal safety. Carefully observe grounding procedure under installation section. All work should be done by a qualified electrician.

WARNING: Make certain power is OFF before starting installation or attempting any maintenance.

ACCESSORY INSTALLATION

1. Make sure all power is off.
2. Wall mount arm is to be mounted with the top flat surface mounted upward only (see Figure 1).
3. Feed supply wires thru hole in base of wall mount arm and into the wiring compartment.
4. Fasten the wall mount arm securely to the mounting surface (mounting hardware by others.)
5. Seal around edges of wall mount arm and mounting bolts with a water resistant caulking to provide a weather resistant seal with the mounting surface (by others)
6. Attach the fixture to the twin mount arm.

Wall mount arm with Tenon

- a) Attach the slipfitter to the fixture according to the slipfitter instructions provided with the slipfitter.
- b) Feed the fixture wiring thru the hole in the top of the twin arm mount and into the wiring compartment.
- c) Mount the slipfitter and fixture to the tenon according to the instructions provided with the slipfitter.
- d) Have a qualified electrician make the power connections.

Wall mount arm for pivot mount fixture

- a) Feed the fixture wires into the wiring compartment, making sure the pivot gasket is properly located.
 - b) Rotate the fixture to its proper orientation. Place the lock washer and nut onto the 3/4" NPT nipple on the inside of the twin arm mount and tighten the nut to 800 inch pounds.
 - c) Tighten the (2) pivot set screws to 20 inch pounds.
 - d) Have a qualified electrician make the power connections.
7. Attach the cover and cover gasket (make sure gasket is properly located) to the end of the wall mount arm using the provided screws. Securely tighten all 3 cover screws.

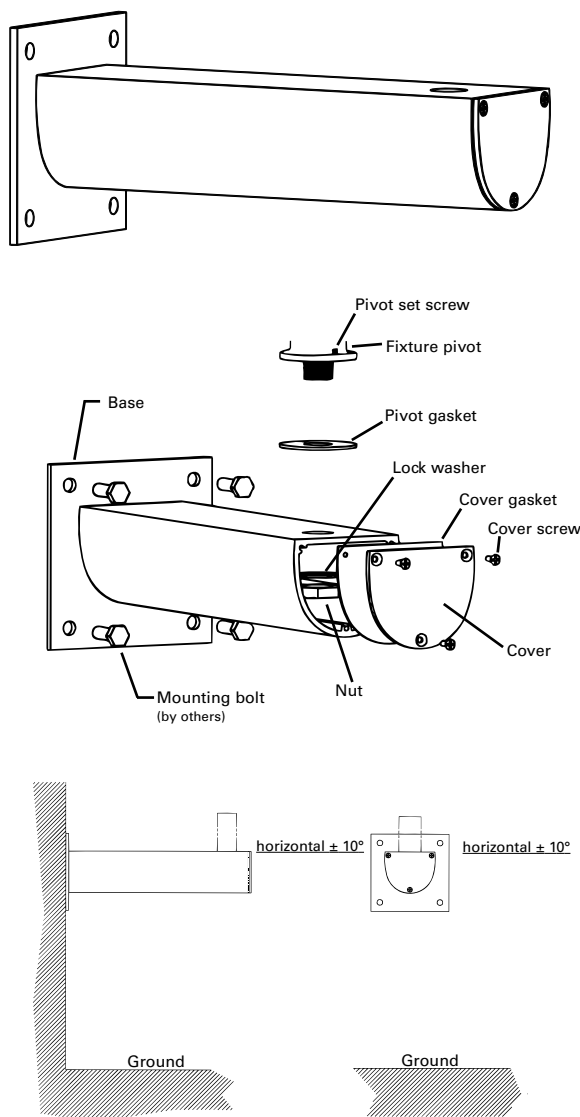


Figure 1

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.